

# SCOT

# MOTORPUMP™

J56 & C56 FRAME  
STRAIGHT CENTRIFUGAL  
5/8", TYPE 6, 6A AND 21 SEAL

## ● INSTALLATION ● OPERATION ● MAINTENANCE INCLUDES MECHANICAL SEAL REPLACEMENT

Check pump for shortage and damage immediately upon arrival. Note damage or shortage on freight bill (bill of lading); immediately file claim with carrier.

**EXTERIOR** — Pay particular attention to conduit box, external hardware and accessories. Touch up abrasions or scratches with approved paint.

**INTERNAL** — If extensive or serious external damage is noted, if impeller is damaged (look in ports), or if shaft binds or sticks, disassemble as required to permit internal inspection.

### HANDLING

Handle with care. Dropping or jarring can seriously damage motor bearings or break pump parts. Lift with device having capacity for pump weight, and use lifting hooks or eye bolts (if provided) or rig double sling around motor frame and pump casing. Do not use sling through pump motor adapter nor around suction and discharge flanges.

### INSTALLATION

**Location** — Pump location should provide the following:

1. Install as close to suction supply as possible.
2. Shortest and most direct suction pipe practical. Suction lift must not exceed limit for pump. NPSH available must equal or exceed pump requirement.
3. Suction port below pumping level to provide priming.
4. Room for inspection and maintenance.
5. Correct power supply to motor; all wiring should meet National Electrical and Local Codes and Regulations.
6. If outdoors, protection from the elements, freezing and water damage due to flooding.

**Piping** — Suction and discharge gauges are useful to check pump operation and are excellent trouble indicators. Install gauges in the lines if pump ports do not have gauge taps. Observe these precautions when installing piping:

1. Support close to, but independently of pump.
2. Use the next larger pump size for suction and discharge.
3. Keep as straight as possible. Avoid bends and fittings.
4. Remove burrs, sharp edges, ream pipe cuts, and make joints air-tight.
5. Don't spring pipe to make connections. Strain must not be transmitted to pump.
6. Allow for pipe expansion with hot fluids; expansion joints are not recommended.

**Suction** — Size and install suction piping to keep pressure loss at minimum and to provide correct NPSH by observing the following:

1. The suction pipe should be equal in size or preferably one size larger than the suction connection of the pump. If pipe is larger than the pump suction, an eccentric pipe reducer should be used at the pump.
2. Pipe should slope upward to pump, even for horizontal run.
3. Use 45-degree or long-sweep 90-degree elbows.
4. A valve in the suction is necessary only on positive suction head installation and must not be used to throttle the pump. The suction valve should be installed for maintenance purposes only.

• Cedarburg, WI 53012

• Irvine, CA 92614  
• Ft. Lauderdale, FL 33315

SCOT DIVISION OF ARDOX CORP. — HOME OFFICE

• P.O. Box 286

FACTORY BRANCHES

• 1881 Kettering  
• 77 SW 20th Street

• 262-377-7000

• 949-756-8076  
• 954-524-6776

• FAX 262-377-7330

• FAX 949-756-9480  
• FAX 954-764-3361

## INSTALLATION, CONT.

**Discharge** — Pumps permit discharge port location at any of four positions, 90 degrees apart. Change by removing cover bolts, rotate casing, and replace bolts. Do not slice O-ring or tear fibre gasket. Scot does not recommend bottom vertical discharge due to erratic pump performance. Ensure there is adequate clearance with selected position between wall or tank, motor conduit box, and grease fittings. Casing may extend beyond base or feet.

1. Short discharge lines may be the same size as the discharge port. Long runs require a pipe larger than the discharge port.
2. Long horizontal runs require a grade as even as possible. Avoid high spots and loops. Trapped air will throttle flow and may result in erratic pumping.
3. Install check and gate valves in discharge line; check valve (if used) between pump and gate valve.

## OPERATION

**Pre-Start** — Before initial start of the pump, check as follows:

1. The rotation must be checked upon installation. Close, then break the contacts quickly and observe the rotation of the exposed portion of the rotating parts. Rotation must agree with the rotation arrow on the motor. For all pumps, the standard rotation is counterclockwise when viewed from the suction end. Motor wiring is easily changed in the field. Observe the wiring diagram on the inside of the terminal box cover, or on the motor nameplate.
2. Check voltage, phase and frequency of line circuit with motor nameplate.
3. Check suction and discharge piping and pressure gauges for proper operation.
4. Assure that pump is full of liquid (primed).

**Priming** — If pump is installed with a positive head on the suction, prime by opening suction valve and allowing liquid to enter the casing, at the same time venting all air out of the top of the casing.

If pump is installed with a suction lift, priming must be done by other methods, such as foot valves, ejectors, or by manually filling casing and suction line.

**CAUTION** - DO NOT RUN PUMP DRY. Serious damage may result if started dry.

**Starting** — Proceed as follows to start pump:

1. Close drain valves and valve in discharge line.
2. Open fully all valves in the suction line.
3. Prime the pump. If pump does not prime properly, or loses prime during start-up, shut down and correct condition before repeating procedure.
4. For pumps moving high temperature liquids, open warm-up valve to circulate liquid for preheating. Close valve after pump has warmed up.
5. Start the motor (pump).

6. When pump is operating at full speed, open discharge valve slowly.

**Running** — Periodically inspect pump while running, but especially after first start and following repair.

1. Check pump and piping for leaks. Repair immediately.
2. Record pressure gauge readings for future reference.
3. Record voltage, amperage per phase, and kW (if an indicating wattmeter is available).
4. Adjust pump output capacity with discharge valve. DO NOT throttle suction line.

**Freezing Protection** — Protect pumps shut down during freezing conditions by one of the following methods:

1. Drain pump; remove all liquid from the casing.
2. Keep fluid moving in pump and insulate or heat the pump to prevent freezing. If heated, do not let temperature go above 100 to 150 degrees F.
3. Fill pump completely with antifreeze solution.

## MAINTENANCE

**Cleaning** — Remove oil, dust, dirt, water, chemicals from exterior or motor and pump. Keep motor air inlet and outlet open. Blow out interior of open motors with clean compressed air at low pressure. Regularly drain moisture from TEFC motors.

**Temperature** — Total temperature, not the rise, is the measure of safe operation for a motor. If temperature by thermometer exceeds limits for insulation class, investigate and change operating conditions.

**Labeled Motors** — It is imperative for repair of a motor with Underwriters' Laboratories label that original clearances be held; that all plugs, screws, other hardware be fastened securely, and that parts replacements be exact duplicates or approved equals. Violation of any of the above invalidates Underwriters' label.

**Lubrication** — Pumps should require no maintenance, other than the motor bearings, according to the following instructions:

**DOUBLE SHIELDED.** When double shielded prelubricated bearings are furnished, no lubrication is required for the life of the bearings. Inspect bearings periodically to determine the condition of the grease and replace the bearings if necessary.




**SINGLE SHIELDED W/GREASE FITTING PROVISIONS.** When single shield bearings are furnished, periodic inspection, cleaning and relubrication is required. See motor manufacturer's specific instructions for lubrication.

## MECHANICAL SEAL REPLACEMENT

### J56 FRAME MOTOR

#### A.) Disassembly:

1. Turn off power.
2. Close suction and discharge valves.
3. Drain pump.
4. Remove bolts holding base to foundation
5. Remove casing bolts.
6. Remove motor and rotating element from casing, leaving casing and piping undisturbed.
7. Insert a screwdriver in one of the impeller waterway passages and back off the impeller nut as shown in Figure 1.
8. Remove motor shaft end cap. Insert a screwdriver in slot of motor shaft. While holding shaft against rotation, unscrew impeller from shaft by turning counterclockwise when facing impeller (Figure 2).
9. Pry off rotating member of mechanical seal from motor or stub shaft by using two (2) screwdrivers. (Figure 3)
10. Remove bolts holding adapter to motor and take off adapter.
11. Place adapter on a flat surface with case rabbet facing down, and push out stationary part of mechanical seal.

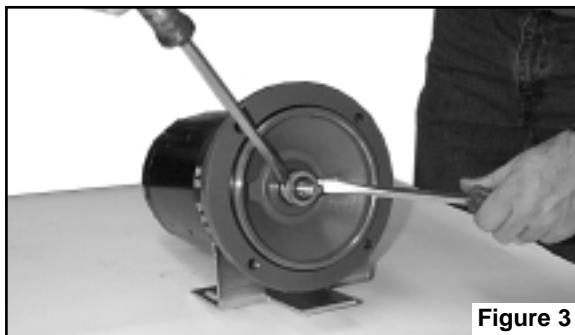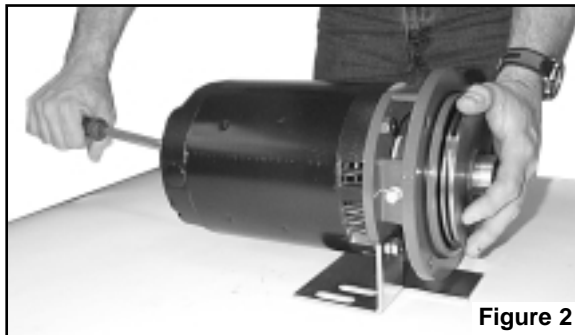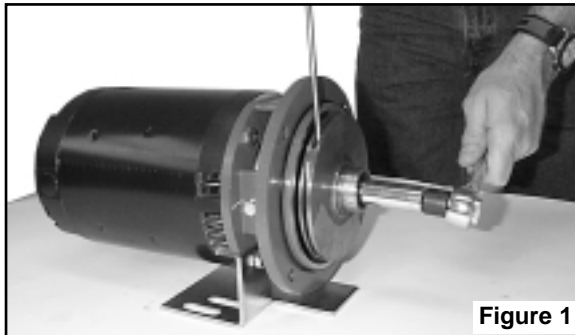

#### B.) Reassembly:

1. Clean gasket and flange faces, seal seat cavity and shaft, in particular shaft shoulder fitting against impeller.
2. Lubricate the seal seat cavity of the adapter and the rubber cup or O-ring of stationary seal seat with the lubricating fluid that comes with the mechanical seal or repair kit. Press the stationary seat in seal seat cavity of the adapter squarely and evenly using a arbor press (if possible) and the cardboard disc supplied with the seal. Be certain that the lapped face (shiny side) is facing you.
3. Remount the adapter on motor, making sure the motor shaft does not dislocate or chip the stationary seat of the seal.
4. Apply the lubricating fluid that comes with the mechanical seal or repair kit to the motor shaft and the rubber bellows of the rotary seal. Slide the seal head on the shaft, press the rubber drive band on the rotary head until the lapped face on the head seats firmly against the lapped face of the stationary seat. Do not chip or scratch faces during installation. Take extra care to make sure the lapped faces are clean. Install spring on seal head (only applies to Type 21 seal).
5. Hold shaft against rotation as described in paragraph 8 of disassembly procedure, and thread impeller on shaft until it is tight against the shaft shoulder. The impeller will compress the seal spring to the proper length assuring correct pressure on lapped faces.
6. Replace D-washer and impeller nut holding impeller against rotation as indicated in paragraph 7 of disassembly procedure (2 & 3 HP 1PH, and all 3PH motors only).
7. Remove any burrs caused by screwdriver on the vane of impeller in waterway passage.
8. Replace motor and rotating element in casing. Be sure that any damaged O-ring or gasket is replaced.
9. Tighten casing bolts alternately and evenly.
10. Replace hold-down bolts.
11. Check for free rotation after assembly is completed.
12. Replace motor shaft end cap.
13. Seal all drain openings using pipe sealant on threads.
14. Reprime before starting. Do not start until pump is completely filled with water.

## MECHANICAL SEAL REPLACEMENT

### C56 FRAME MOTOR, TYPE 6A SEAL

#### A.) Disassembly:

1. Follow paragraphs 1 - 6 of instructions for Mechanical Seal Replacement J56 frame.
2. Insert wrench between openings in adapter and place on flats of stub shaft. While holding shaft against rotation, remove the impeller retaining assembly using a 7/16 socket (Figure 4).
3. Leave the wrench on flats of stub shaft and unscrew the impeller by turning counterclockwise when facing the impeller (Figure 5).

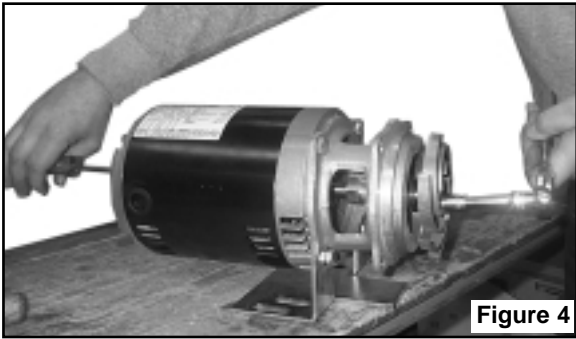


Figure 4

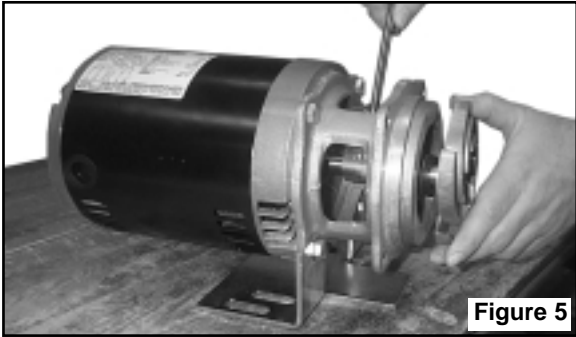


Figure 5



Figure 6

4. The seat of the seal can now be removed from the impeller (Figure 6).
5. Remove cap screws holding adapter to the motor and remove adapter.
6. Place adapter on a flat surface with adapter rabbet facing down, and push out the mechanical seal head.

**A.) Reassembly:**

**CAUTION:** The mechanical seal is a precision product and should be handled accordingly. Use care when handling lapped running surfaces of the mechanical seal to ensure they remain clean and are free of chips or scratches.

1. Clean gasket and flange faces, seal seat cavity, seal head bore and shaft, in particular shaft shoulder fitting against impeller.
2. Lubricate the seal seat cavity of the impeller and the rubber cup or O-ring of seal seat with the lubricating fluid that comes with the mechanical seal or repair kit. Press the stationary seat in seal seat cavity or the impeller squarely and evenly using a arbor press (if possible) and the cardboard disc supplied with the seal. Be certain that the lapped face (shiny side) is facing you.
3. Apply pipe sealant on outside of the stainless portion of the seal head to ease head into adapter. Press in the adapter on the stainless lip using a 3" long piece of 1 1/4" PVC pipe.
4. Hold shaft against rotation as discussed in paragraph 3 of disassembly procedure, and thread impeller on shaft until it is tight against the shaft shoulder. The impeller will compress the seal assuring proper pressure on the lapped faces.
5. Replace impeller retaining assembly holding impeller against rotation as indicated in paragraph 3 of disassembly procedure. (2 & 3 HP, 1PH and all 3PH motors only.)
6. Replace motor and rotating element in casing. Be sure that any damaged gasket is replaced.
7. Tighten case bolts alternately and evenly.
8. Replace hold-down bolts.
9. Check for free rotation after assembly is completed.
10. Seal all drain openings using pipe sealant on threads.
11. Reprime before starting. Do not start unit until pump is completely filled with water.

The approved lubricating fluid for seal installation is included with the mechanical seal or repair kit. **DO NOT USE OTHER LUBRICATING LIQUIDS!**

**WE RECOMMEND STOCKING A SPARE MECHANICAL SEAL OR REPAIR KIT TO ELIMINATE DOWN TIME.**

**PRESSURE AND TEMPERATURE LIMITATION  
STANDARD FITTED PUMPS**

PUMP NO.	PRESSURE		TEMPERATURE	
	STANDARD	OPTIONAL	STANDARD	OPTIONAL
68, 69	75 PSI	N/A	220°F	275°F
51, 61, 74	75 PSI	150 PSI	220°F	275°F
71, 72, 77, 78, 79, 82	75 PSI	N/A	220°F	275°F
11, 13, 60	75 PSI	150 PSI	220°F	275°F
62	165 PSI	165 PSI	220°F	275°F
ALL OTHERS	175 PSI	175 PSI	220°F	275°F
N/A-NOT AVAILABLE				

**CAUTION**

DO NOT ALLOW EITHER THE DISCHARGE PRESSURE OR THE TEMPERATURE OF THE LIQUID TO EXCEED THE LIMITATIONS LISTED ABOVE.