



Viking Replacement Parts List

HL 124 Pump

Item	Viking Part #	Part Name	Delta T Part #
1	2-507-003-375	Locknut	204-00001-00
2	2-807-003-375	Lockwasher	204-00002-00
3	2-140-001-781	End cap for bearing housing *	204-00023-00
4	2-288-003-210	Bearing spacer collar (2 required) (set of 2)	204-00003-00
5	2-283-007-378	Lip seal for bearing housing (2 required) *	204-00004-00
6	2-055-012-375	Ball bearing	204-00005-00
7	3-060-034-922	Bearing housing with set screw *	204-00033-00
8	2-524-005-100	Packing gland	204-00021-00
9	2-505-004-375	Packing gland nut (2 required)	204-00027-00
10	2-066-009-375	Packing gland bolt (2 required)	204-00022-00
11	2-520-012-830	Packing set (7 rings per set)	204-00006-00
12	2-465-003-375	Lantern ring *	204-00024-00
13	2-805-017-375	Packing retainer washer	204-00007-00
14	2-109-003-880-02	Bracket bushing	204-00008-00
15	2-469-002-376	Grease fitting	204-00028-00
16	2-150-004-255	Capscrew for bracket (8 required)	204-00041-00
17	3-075-071-080	Bracket and bushing *	204-00009-00
18	2-313-001-806-15	Bracket gasket	204-00010-00
19	2-542-001-376	Pipe plug	204-00043-00
20	2-194-801-100	Casing	204-00011-00
21	2-309-001-806-15	Head gasket	204-00012-00
22	3-566-556-012-33	Rotor and shaft	204-00013-00
23	3-428-403-105-42	Idler and bushing	204-00015-00
24	2-095-011-880-02	Idler bushing	204-00020-00
25	2-433-004-321	Idler pin (plain)	204-00026-00
26	3-370-401-011	Head (plain) and idler pin (plain)	204-00014-00

Note: Any part followed by an * IS NOT INTERCHANGEABLE with any pump other than the one specified above. Please give MODEL and SERIAL NO when ordering parts. Part numbers are listed as a guide, but many units have special parts not covered by this list. Prices are subject to change without notice.